

## Removing and Installing Signal Horn

37 Li

1. Remove bolt at horn bracket under left front fender
2. Disconnect cables and remove horn

When installing the horn, make sure that it does not contact the body.

## Adjusting Signal Horn

38 Li

The performance of the horn is affected as the breaker points wear. An adjustment is made by means of the adjusting screw on the back of the housing.

1. Remove horn
2. Clamp horn bracket in a vise as shown in the illustration
3. Connect horn to a 6-volt battery, if possible in series with a contact button
4. Adjust horn by slowly turning the adjusting screw clockwise or counter-clockwise until the point is reached at which the horn is giving its best performance and the pitch of the tone is normal without metallic vibrations

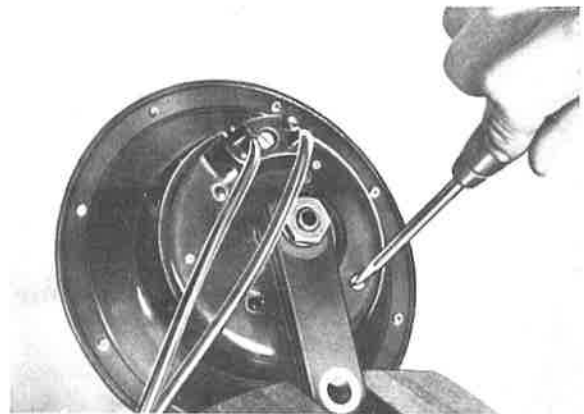


Fig. 62

If after having adjusted the breaker points, the horn is still irregular in action, giving only a choking sound, or does not vibrate, its should be replaced.

## Removing and Installing Segment

39 Li

1. Remove push button emblem by means of a punch which should be inserted in the holes under the steering hub



Fig. 63