


Removing and Installing Front Hood Lock

Removal

1. Open front hood
2. Remove two bolts (the nuts are welded to the sheet metal). Remove top half of mechanism with safety hook

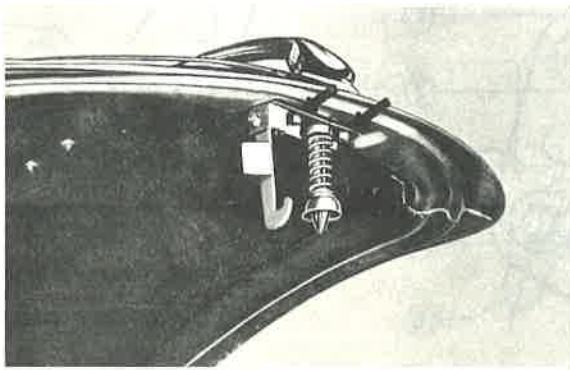

3. Remove two bolts of the lock carrier bracket on the front panel
4. Unhook lock spring and remove lock
5. Loosen clamping screw and remove bowden cable from holder (see illustr. at right)

Installation

When installing the front hood lock proceed in reverse order, observing the following points:

1. Grease hood lock
2. Install lock spring and lower section of lock, but do not tighten bolts
3. Feed in bowden cable and push wire end into holder. Tighten clamping screw (see illustr. below)
4. Fasten top half of lock on hood panel
5. Through repeated opening and closing of the hood make sure that the lock is positioned correctly. In closed position the panel should be flush with the fender line. If necessary adjust the position of upper and lower lock sections in the fixing slots
6. Secure lower section
7. Check adjustment of bowden cable and if necessary correct
8. Grease bolt

