



# DOORS AND WINDOWS

## Removing and Installing Door

9 Bo

### Removal

1. Remove hinge cover
2. Remove split pin at upper end of hinge pin

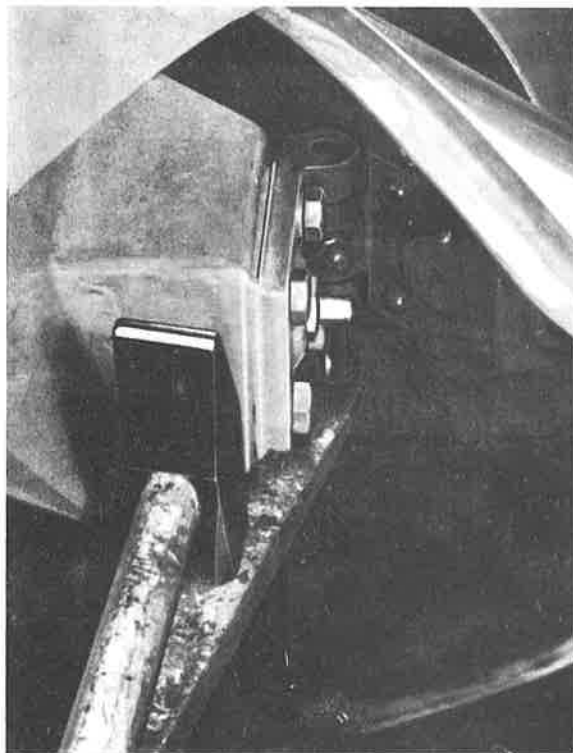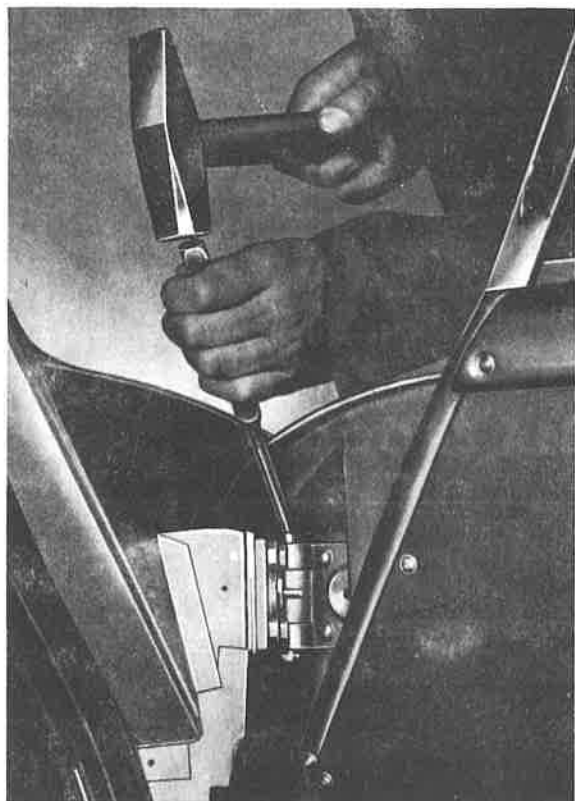

3. With a punch drive hinge pin down until the head can be gripped from below. (It is best to use a flat metal strip about  $\frac{3}{16}$ " thick with a half-round cutout  $\frac{3}{8}$ " dia. at one end; the opening is placed under the head and the pin can be extracted as shown at upper right illustr.) Remove hinge pin
4. Hold door to prevent it from tilting and drive out lower hinge pin as shown after removing rubber plug from access hole
5. Remove door

