


REAR AND FRONT HOODS

Removing and Installing Front Hood

1 Bo

Removal

1. Pull bowden cable under instrument panel to open hood lock
2. Push in safety hook left of lock and open hood
3. Open hood fully so that the holding mechanism engages. (By lifting hood up to the stop the mechanism will disengage again and the hood can be closed.)
4. On each hinge bracket undo two hex bolts

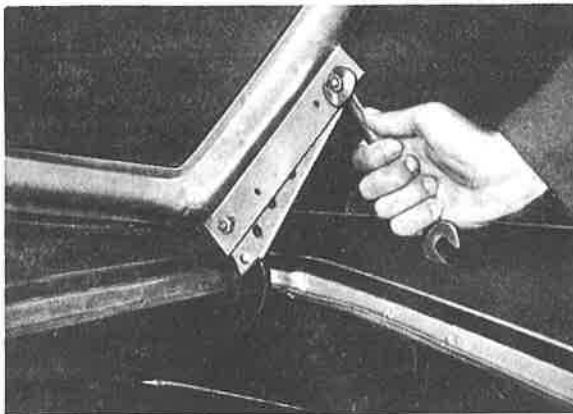

5. While supporting the hood remove the bolts
6. If necessary unscrew hex bolts holding hinges to body and remove hinges complete (see 2 Bo)

Installation

When installing the hood proceed in reverse order, observing the following points:

1. Check rubber seal and replace if required. The gasket is cemented to the compartment edge and screwed to the metal, using the reinforcing strips at the rounded corners as shown



2. Fasten, but do not tighten, the hood to the hinges and adjust in the slots until the panel fits with equal clearance all around. Tighten screws